




Disable the Voice Notes Button

Travis Bottalico


Windows Mobile comes with a Voice Notes application that can be annoying when accidentally launched from a device's quick launch. Because one of the device's scan buttons is located directly below the Voice Notes quick launch button, it can accidentally be pressed when attempting a scan. To eliminate this, follow these quick steps to disable the quick launch button that launches the Voice Notes program.

[For Windows Mobile 5 devices \(CMDM 5660, 6600, etc.\)](#)


1) Click on Start > Settings

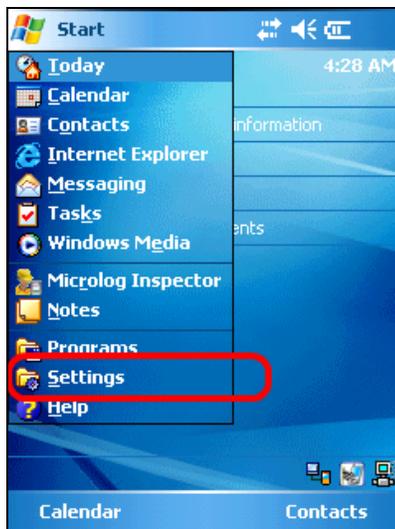

2) Click on "Buttons"

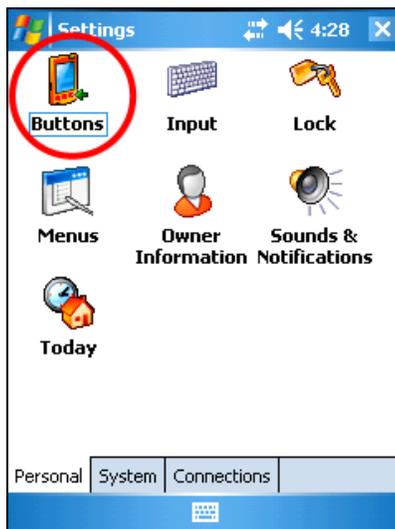


3) Assign the “Record Button” to “<None>”

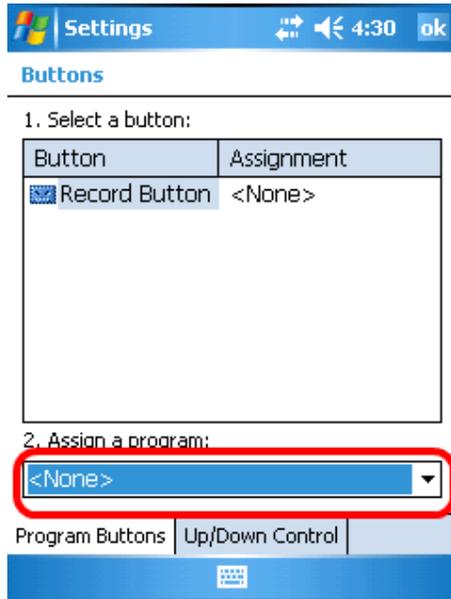


4) Click “OK” to save and you are done!

[For Windows Mobile 6.5.3 devices \(CMDM 6700 etc.\)](#)

1) Click on Start and then select “Settings”

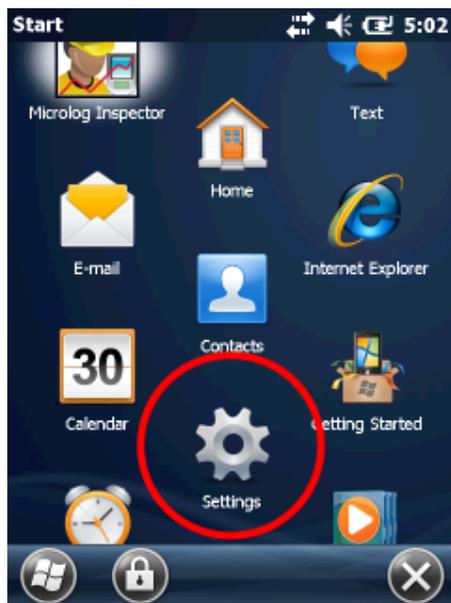


2) Select "Personal"

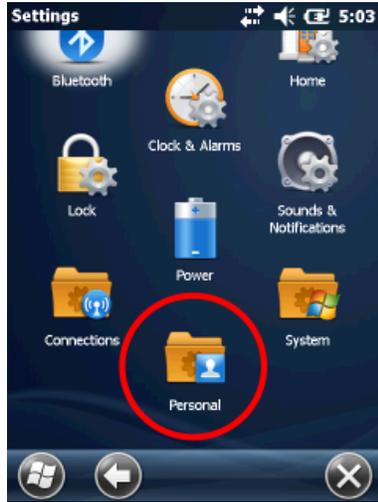

3) Select "Buttons"



4) Assign the "Record Button" to "<None>"

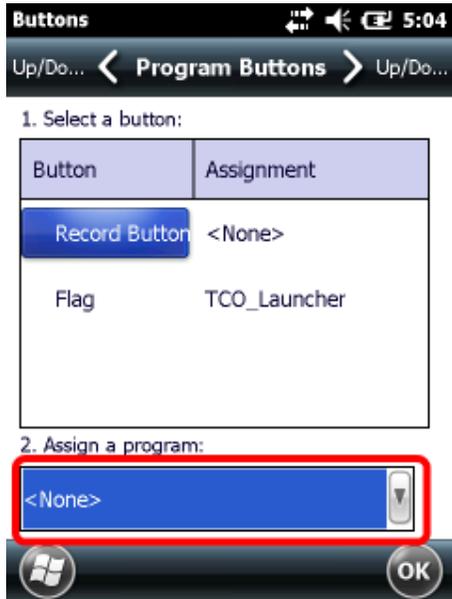

5) Click "OK" to save and you are done!