

Knowledge Base Article

Product Group: MARLIN I-Pro

Product: CMDM 6700 – Microlog Inspector

Version: N/A

Abstract

This article explains how to set up a static IP address in a SKF Microlog Inspector CMDM 6700 handheld with a LAN-adapter for wireless communication.

Overview

Follow the steps below to set up a static IP address in a SKF Microlog Inspector CMDM 6700 handheld with LAN-adapter.

1. Go to **Start > Settings > Connections > Wi-Fi**. [Figure 1]



Figure 1. Wi-Fi menu

2. Select **Remote-NDIS Host**. [Figure 2]



Figure 2. Select Network Adapter

3. Select “Use specific IP address” and then enter the network settings. [Figure 3] Press **OK** to save.

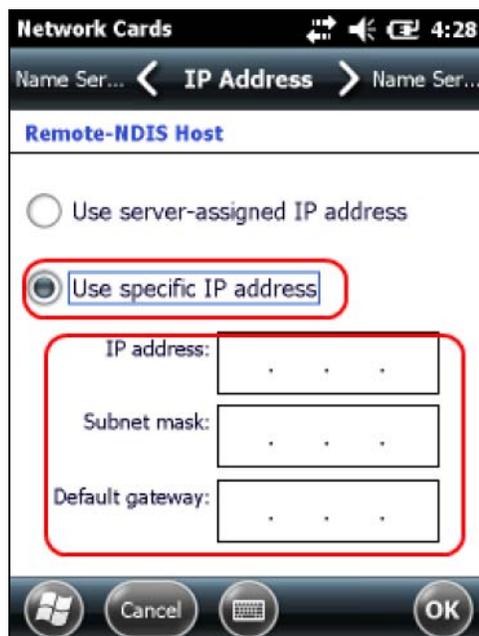


Figure 3. Enter network settings

For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by email at TSG-Americas@skf.com.

