

Knowledge Base Article

Product Group: Transmitters Product: CMSS420VT Version: All

Abstract

This article contains a tool to provide an easy way for a customer to determine how far away a CMSS420VT can be located from the PLC or DCS that is being used to power the transmitter and monitor the 4–20 mA loop output.

Overview

The Microsoft Excel spreadsheet attached applies to all CMSS420VT versions, all vibration ranges, as well as the temperature loop output.

The spreadsheet is saved in .xlt format and will open a fresh spreadsheet copy each time it is started (to avoid overwriting the original spreadsheet when new values are saved).

To download the tool, click on the zipped file located in the **Attachments** section to the right. [Figure 1]



Figure 1. Attachments section

The tool may be saved by extracting the contents of the attached file to the desired location.

SKF Reliability Systems 5271 Viewridge Court * San Diego, California, 92123 USA Telephone 1-800-523-7514 Web: www.skf.com



For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by email at <u>tsg-americas@skf.com</u>.



SKF Reliability Systems 5271 Viewridge Court * San Diego, California, 92123 USA Telephone 1-800-523-7514 Web: www.skf.com