

Knowledge Base Article

Product Group: Microlog Analyzer

Product: CMXA 45, 48, 75 and 80

Version: N/A

Abstract

This article provides instructions on how to install the SKF Microlog USB driver for use with SKF Microlog Analyzer series CMXA 45, 48, 75, and 80.

Overview

Prior to installing a new version of the SKF USB driver, any existing version of the driver should be removed. See article 2104 in the Related Articles section for instructions on how to remove an existing SKF USB driver or how to verify USB driver version information.

Ensure that the Microlog is disconnected from the computer before proceeding.

It is recommended that Microsoft ActiveSync version 4.5 (Windows XP) or Windows Mobile Device Center (Windows 7) be downloaded from Microsoft and installed before installing the SKF USB driver.

Follow the instructions below to begin the driver installation:

1. Save the SKF USB driver installer (“SKF USB Driver Installer_v1.00.8704.msi”) to the computer by clicking on the file located in the **Attachments** section to the right of this article. [Figure 1]



Figure 1. Attachments section

2. Double-click on the “SKF USB Driver Installer_v1.00.8704.msi” file. For Windows 7 operating systems, right-click the file and select **Run as Administrator**.
3. The wizard will suggest that the tool be installed for use by *Everyone* and installed in default Program Files sub-folders. It is recommended that these default settings be used. Click **Next** until the installation has completed.
4. Now, select **Start → Programs → SKF → USB Driver → Install** to begin driver installation. Click **Next** until the SKF USB Driver installation has completed.
5. Connect the Microlog.
6. The Found New Hardware Wizard will launch.
7. Do not allow the wizard to search for updated drivers. [Figure 2] Click **Next**.



Figure 2. Found New Hardware Wizard

- To assure the wizard finds the correct version of SKF USB Driver, select **Install from a list or specific location (Advanced)**, and then click **Next**. [Figure 3]

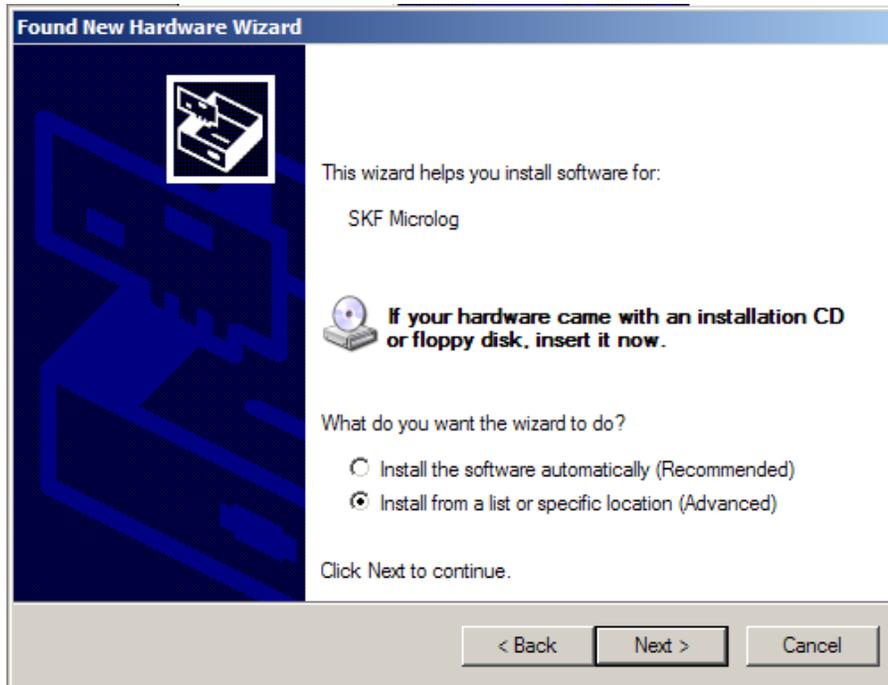


Figure 3. Choose the *Advanced* option

9. Select **Don't search. I will choose the driver to install.** [Figure 4]
Click **Next**.

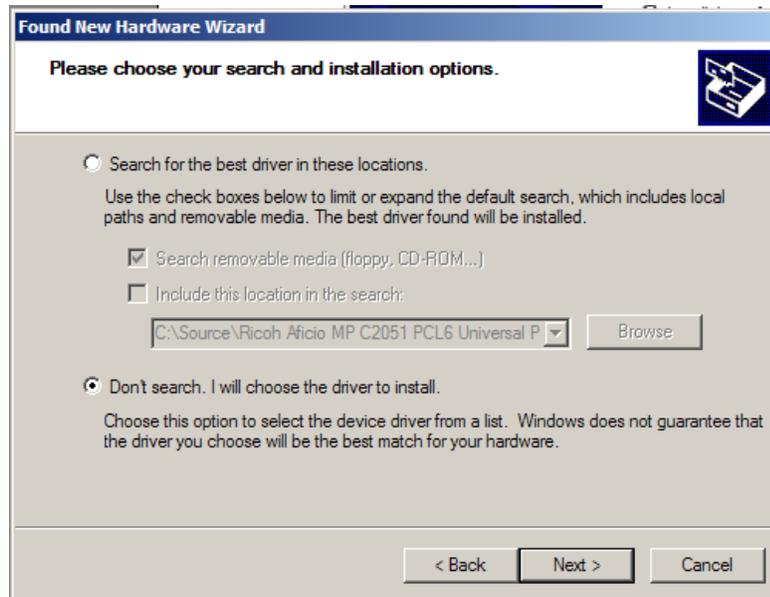


Figure 4. Select the *Don't search* option

10. Click the **Have Disk...** button. [Figure 5]

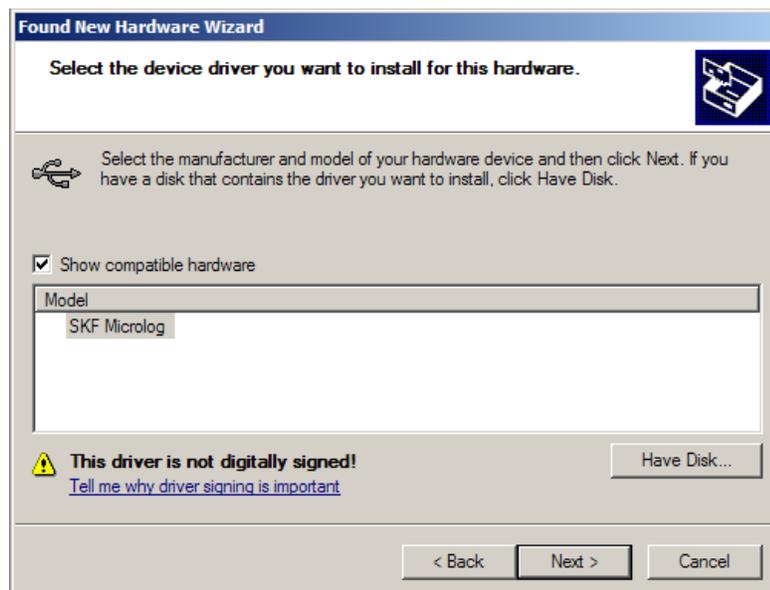


Figure 5. Select device driver to install

11. Click the **Browse** button [Figure 6]

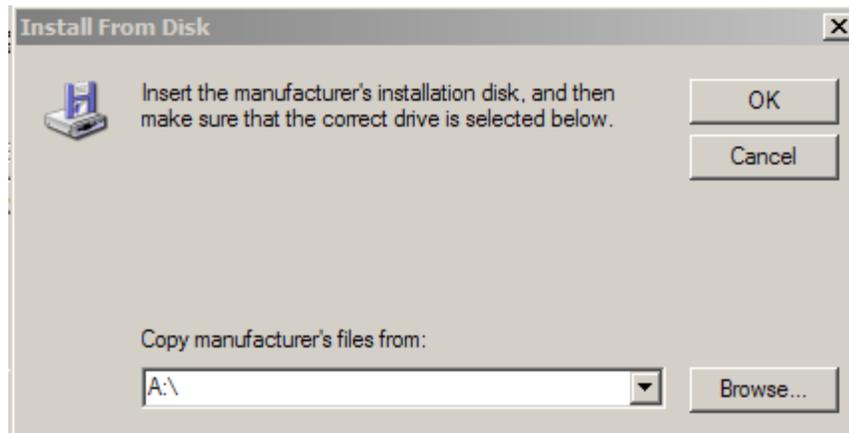


Figure 6. Click Browse

12. Navigate to the **SKFUSB.inf** file [Figure 7] that was installed in the C:\Program Files\SKF\SKF USB Driver\ folder (Windows XP) or the C:\Program Files (x86)\SKF\SKF USB Driver\ folder (Windows 7) and click **Open**, then **OK**, then **Next**.

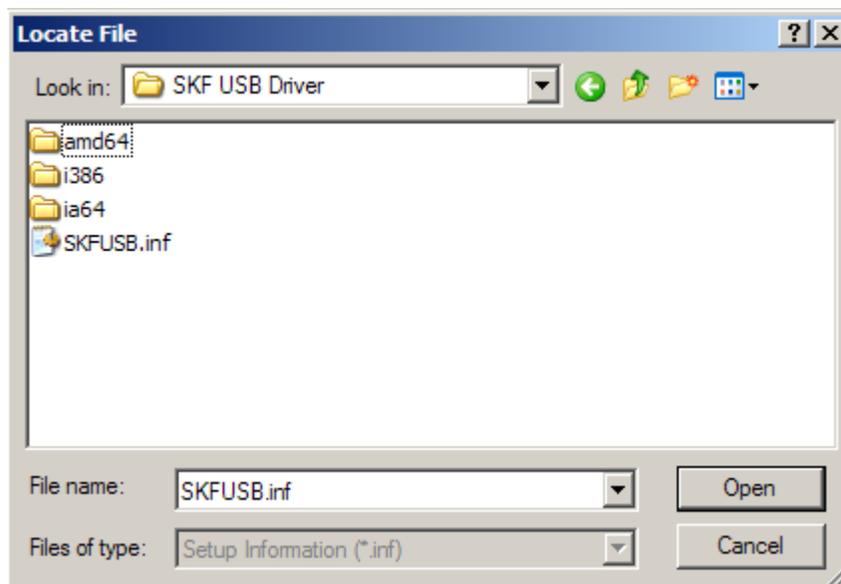


Figure 7. Locate file

13. When the Windows Logo testing dialog box appears [Figure 8], click **Continue Anyway**.

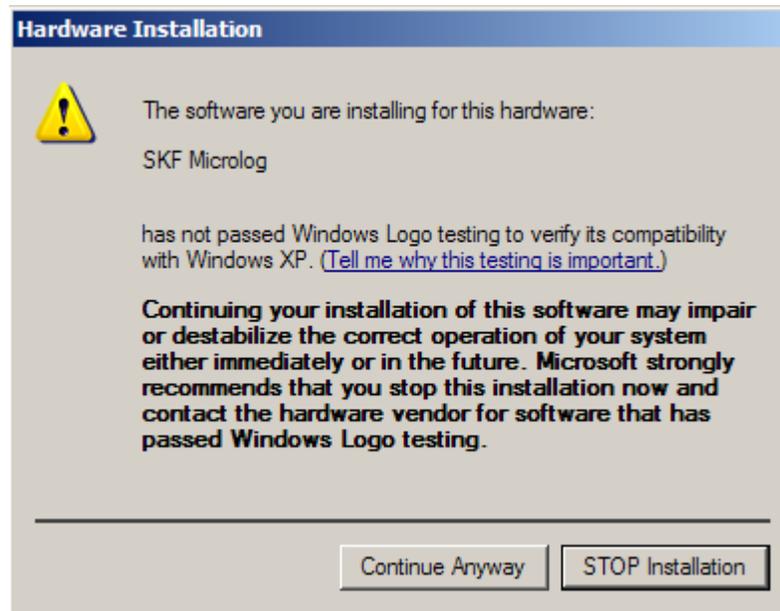


Figure 8. Windows Logo testing notice

14. Click **Finish** to complete the installation. [Figure 9]



Figure 9. Click Finish

Now, Microsoft ActiveSync or Windows Mobile Device Center will show the connection to the Microlog.

For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by email at TSG-CMC@skf.com.

