

Knowledge Base Article

Product Group: Software
Product: CMSW7400 - @ptitude Analyst
Version: 7.0

Abstract

SKF @ptitude Analyst 2012 Edition does not come preloaded with bearing frequencies; therefore, the bearing frequency database must be manually imported. This article describes how to import the bearing frequency database (bearings.mab) into SKF @ptitude Analyst.

Overview

Follow the steps below to manually import the bearing frequency database into SKF @ptitude Analyst.

1. Download the bearing frequency database (**bearings.mab**) located in the **Attachments** section to the right and save it to the local PC. [Figure 1]



Figure 1. Attachments section

- In @ptitude Analyst, go to **File > Import > Analyst Data (MAB)...** [Figure 2]

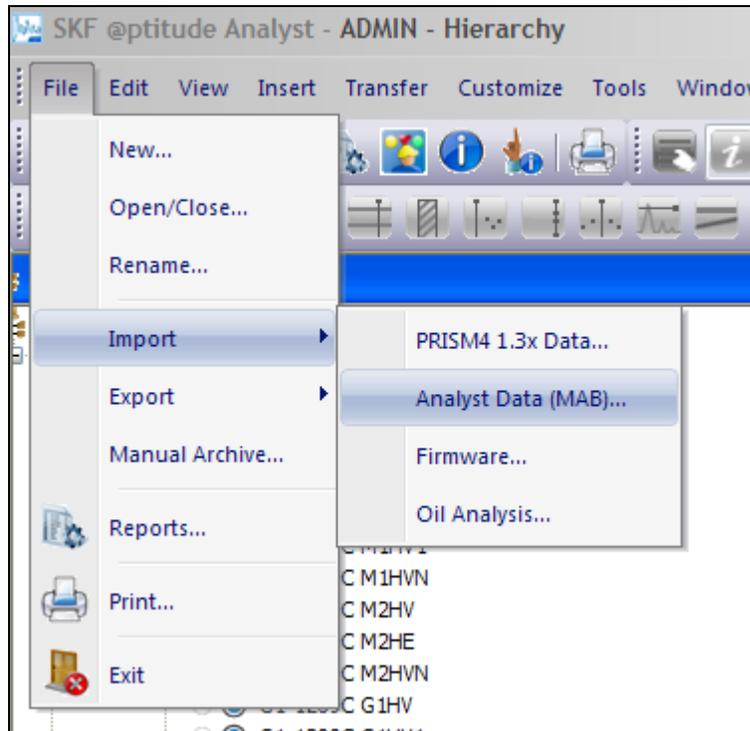


Figure 2. File > Import menu

- Click **Browse...** and locate the **bearings.mab** database. [Figure 3]

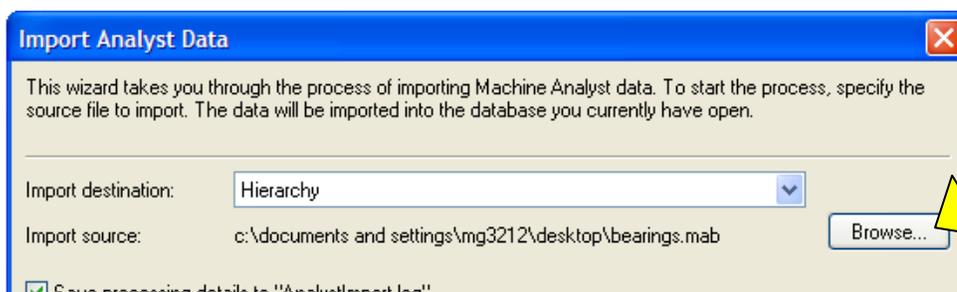


Figure 3. Select import source

4. Select the **Update** option and then click **Next**. [Figure 4]

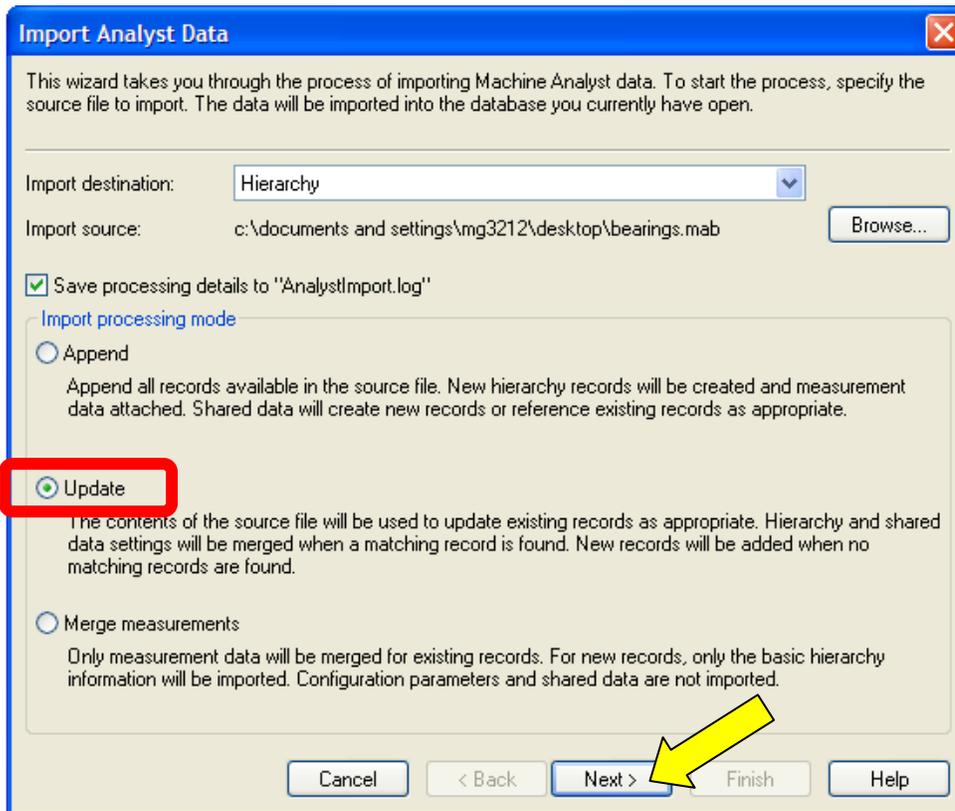


Figure 4. Import dialog

5. Click **Next** again to begin the import process. [Figure 5]

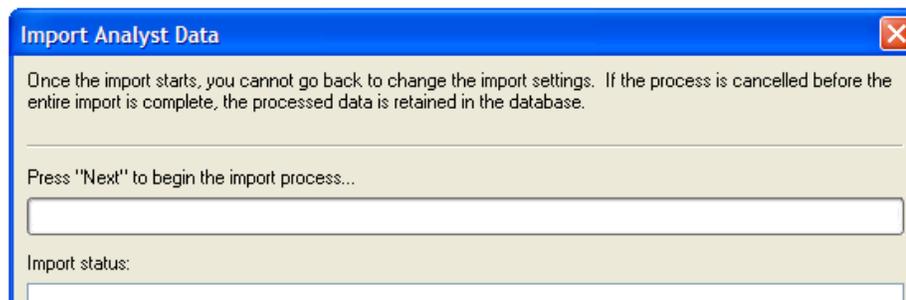


Figure 5. Press Next to begin importing database

6. A green progress bar will display the progress of the import. Wait until the import is complete. [Figure 6]

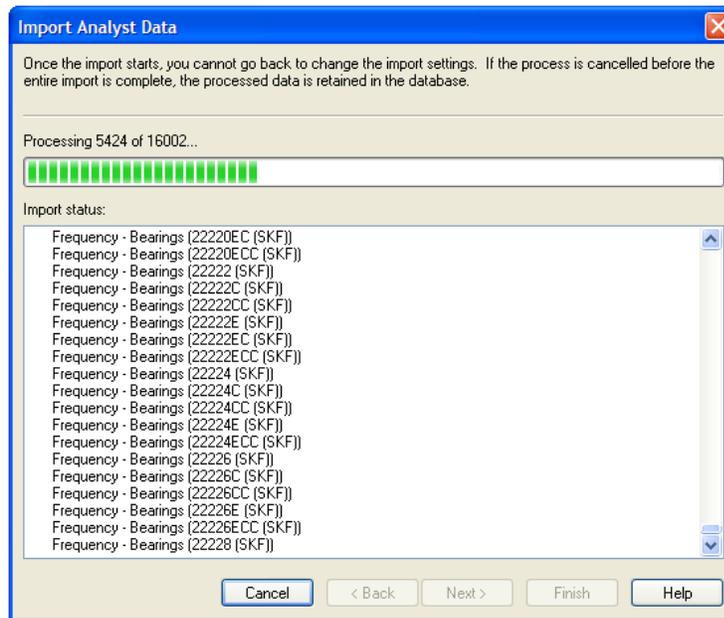


Figure 6. Progress of import

7. When the import is complete, click **Next** to review the import summary. [Figure 7]

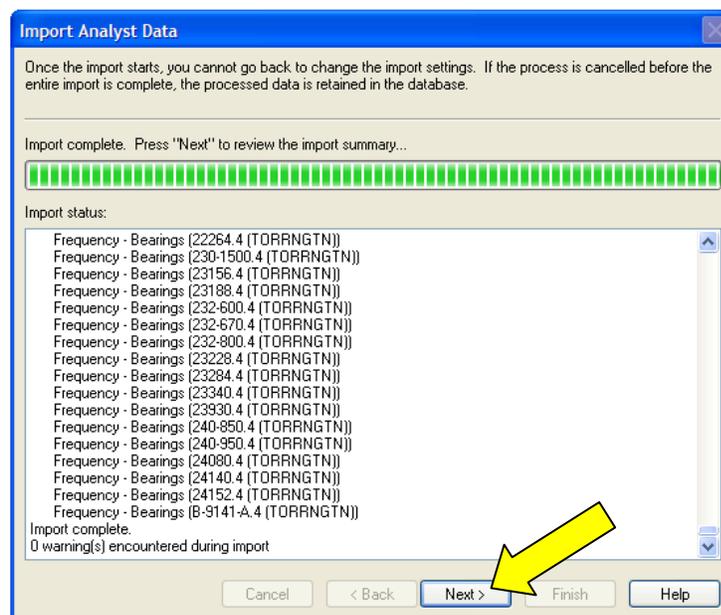


Figure 7. Import complete

- The summary window displays the number of bearings that were imported. Click **Finish**. [Figure 8]

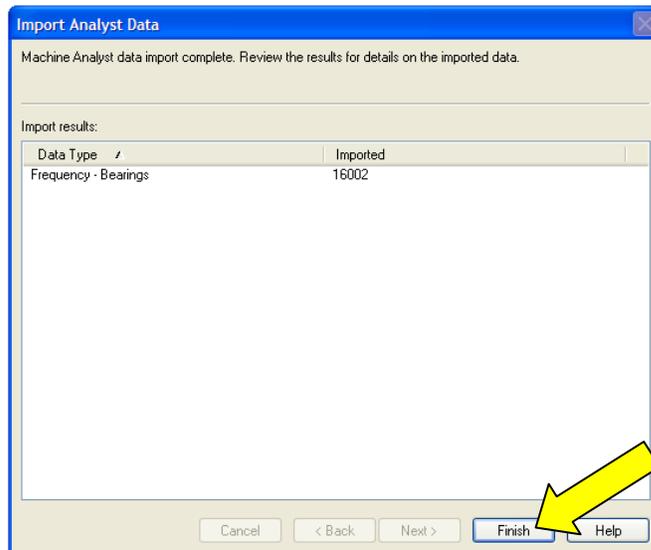


Figure 8. Import summary dialog

- The import is complete. In the **Frequency Sets Editor**, the complete bearing frequency library will be present. [Figure 9]

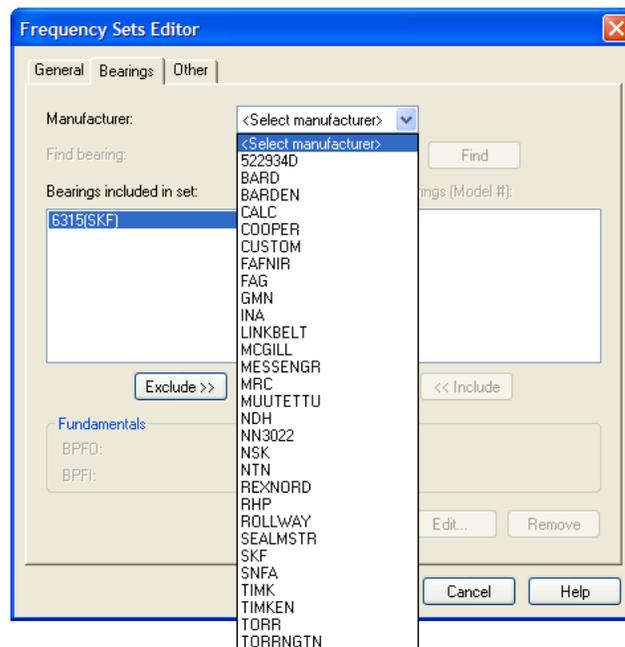


Figure 9. Frequency Sets Editor dialog

For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by email at TSG-Americas@skf.com.

