

Knowledge Base Article

Product Group: MARLIN I-Pro

Product: CMDM6600 – Microlog Inspector

Version: N/A

Abstract

This article provides instructions on how to perform a ping test on a SKF Microlog Inspector handheld. This procedure should be used to test communication between the device and the server computer running the Microlog Service.

Overview

Follow the steps below to initiate a ping test:

1. On the handheld, click on the small computer icon in the lower right corner. [Figure 1]

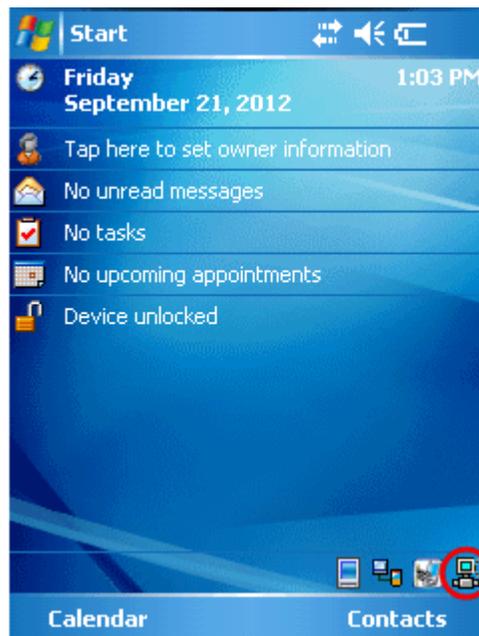


Figure 1. Computer icon

- Next, select **Tools > Ping Test...** [Figure 2]



Figure 2. Tools > Ping Test...

- Finally, select the option *Ping the host address below:* [Figure 3], and type in the **IP address** of the computer running the Microlog Inspector Service. Press the **[Ping!]** button when finished.

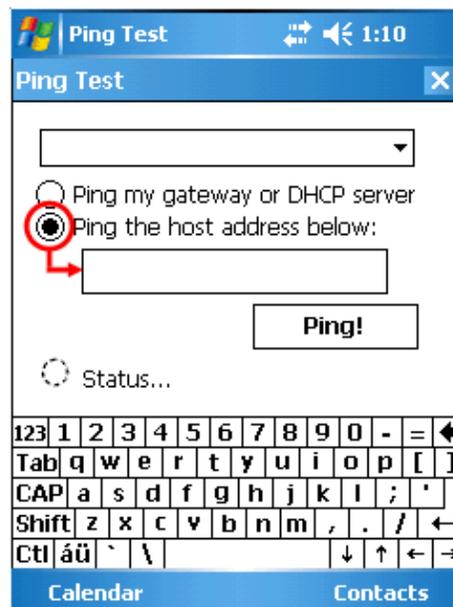


Figure 3. Input IP address of host

The device may execute the ping test three or four times. Each time the test is done, the device will return a message stating whether the ping was successful or whether it failed.

For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by email at TSG-Americas@skf.com.

