

# Knowledge Base Article

Product Group: Basic Condition Monitoring Products  
Product: CMVL 4000 - Wireless MicroVibe; CMAC 4000 Wireless  
MicroVibe Data Management Software  
Version: 2.0.0

## Abstract

SKF Wireless MicroVibe Data Management Software is now available in multiple languages. This article provides instructions on how to apply language files to the installation and have the ability to change the language in which the software is displayed.

## Overview

The SKF Wireless MicroVibe Data Management Software is available in the following languages:

- Japanese
- English
- Chinese
- French
- German
- Portuguese
- Spanish
- Swedish

To apply multiple language support to the application, follow the steps below.

1. Save the file "Data Management Software x64.zip" located in the Attachments section to the right of this article. [Figure 1]

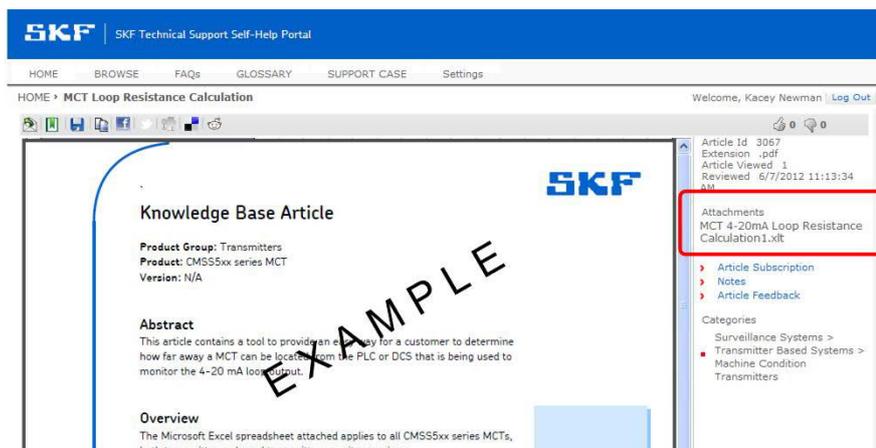


Figure 1. Attachments section

- Copy the contents of the folder and paste the items in the following (default) installation path on your computer:

<C:\SKF\WirelessMicroVibe>

The installation folder should now match Figure 2 below:

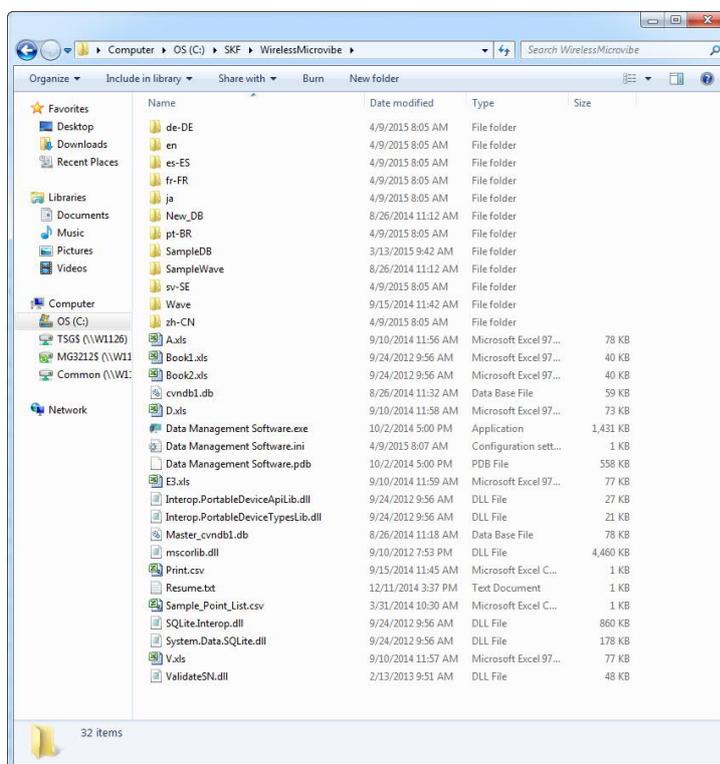


Figure 2. Wireless MicroVibe installation folder

3. Launch the SKF Wireless MicroVibe Data Management Software.
4. Select Language from the main menu. [Figure 3] The language options will be listed.

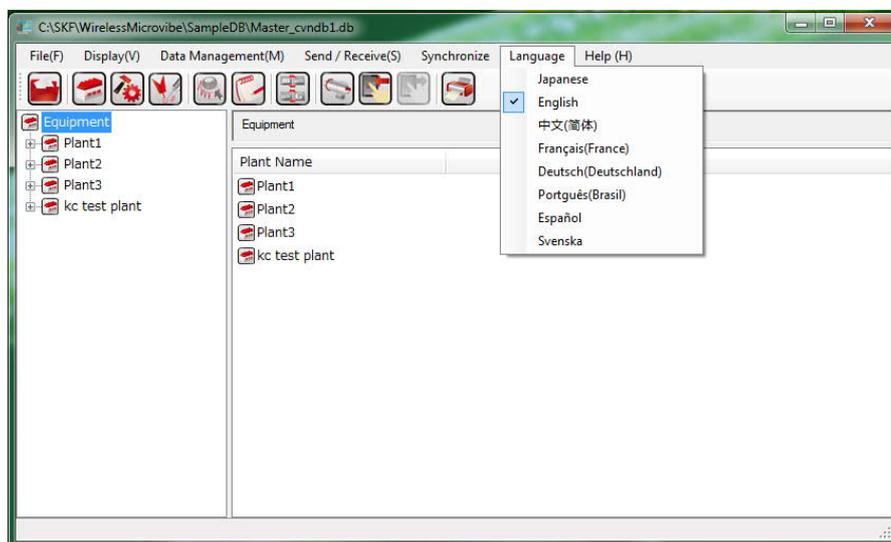


Figure 3. Selecting language to display

5. After selecting the desired language from the menu, a message will be displayed. [Figure 4] The application must be restarted for the changes to take affect. Go to File > Exit to close the program.

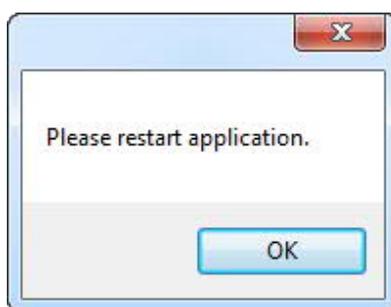


Figure 4. Restart application

6. Launch the program again, and the software will load in the language chosen.

----

For further assistance, please contact the Technical Support Group by phone at 1-858-496-3627, or by e-mail at [TSG-CMC@skf.com](mailto:TSG-CMC@skf.com).