

# Knowledge Base Article

Product Group: Inspection Systems  
 Product: CMDM 6700 – Microlog Inspector  
 Version: 1.4.4.1

## Abstract

There may be times when an operator must align (or calibrate) the touch screen on a SKF Microlog Inspector handheld; however, the Microlog Inspector Secure utility does not allow the operator access to that menu item. This article explains how to add the touch screen calibration option in the Microlog Inspector Secure startup menu.

## Overview

Use the following steps to add the touch screen calibration menu option to Microlog Inspector Secure.

1. Connect the CMDM 6700 handheld to a computer and establish a Windows Mobile Device Center connection.
2. Browse the device and place the “TouchCalib.cab” file in the device’s \CABFILES folder. [Figure 1]

The “TouchCalib.cab” file can be downloaded from the Attachments section to the right of this article. If the article is not being viewed from within the SKF Technical Support Self-Help Portal, please contact Technical Support to obtain a copy.

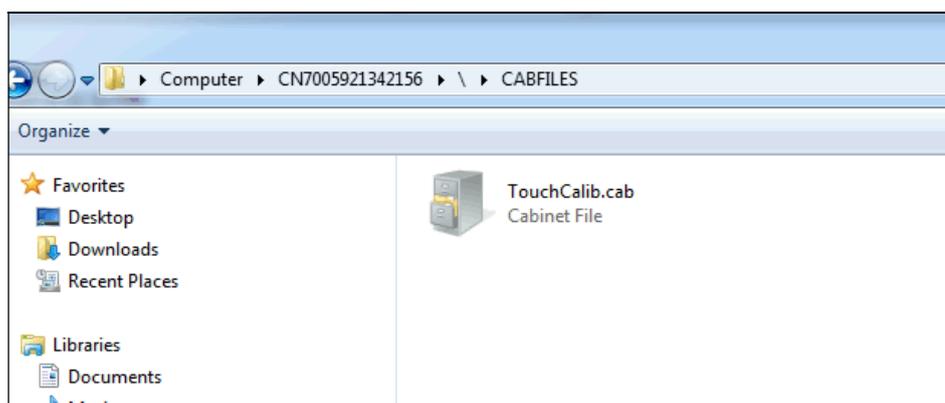


Figure 1. Paste file in device’s \CABFILES folder

3. Perform a warm boot on the device and the cab file will install.
4. Upon reboot, align the screen when prompted.

5. Ensure the handheld is connected to the computer. Then, launch the desktop Microlog Inspector Secure application by going to Start > All Programs > SKF > Microlog Inspector Tools > Microlog Inspector Secure. [Figure 2]

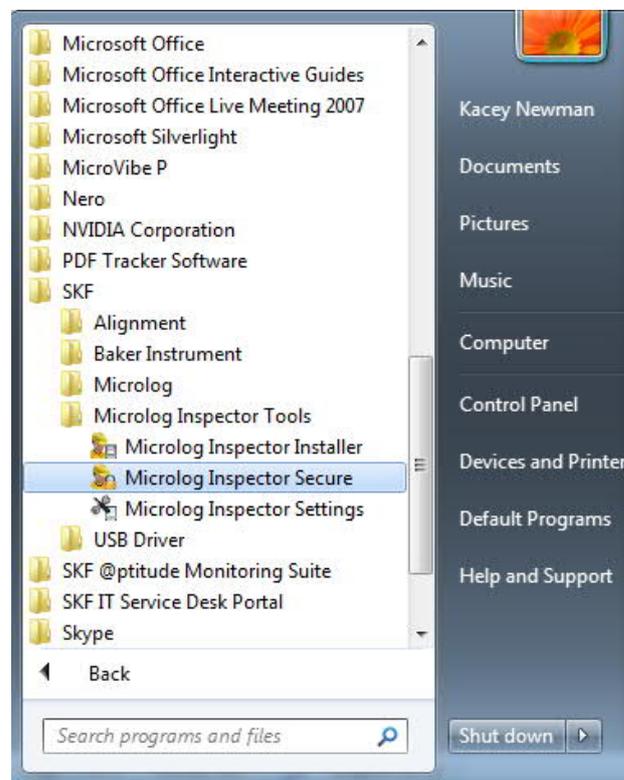


Figure 2. Launch desktop application

6. Click the [...] button to add a new program to the startup menu. [Figure 3] The executable file will be located in \Program Files\TouchCalib\TouchCalib.exe.



Figure 3. Add new menu item

- Once the "TouchCalib.exe" file is selected, choose a Display Name for the program, such as "Align Screen." [Figure 4] Press Install when ready. If the Install button is grayed out, ensure the Exit password has been entered.

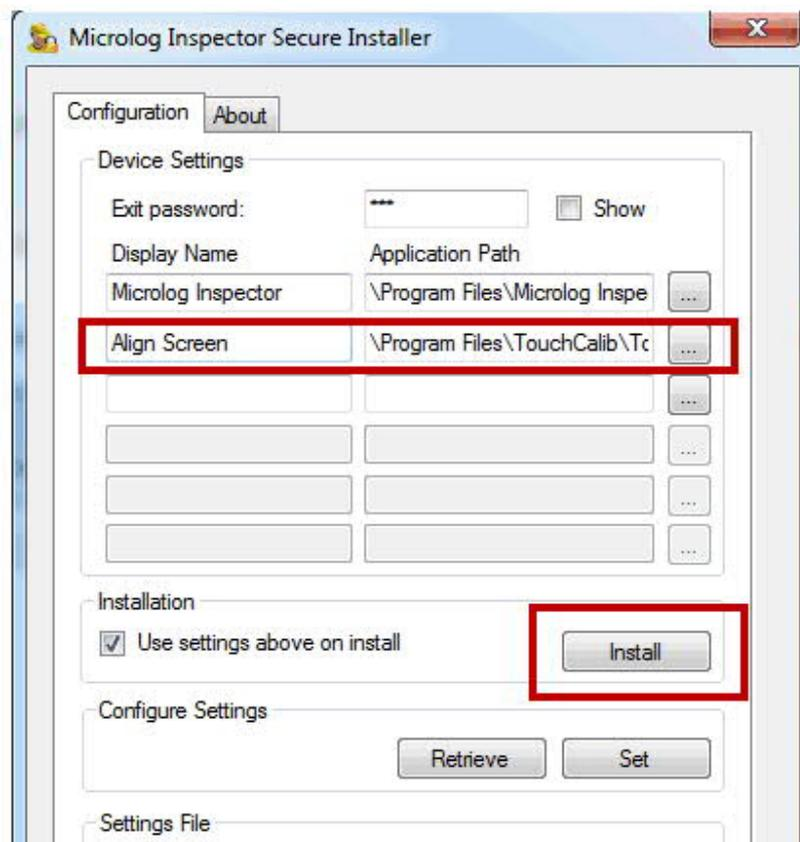


Figure 4. Choose a name

- Now, the operators will have the option to align the touch screen [Figure 5] when Microlog Inspector Secure is installed.



Figure 5. Align Screen option in Microlog Inspector Secure

-----  
For further assistance, please contact the Technical Support Group by phone at 1-800-523-7514 option 8, or by e-mail at [TSG-CMC@skf.com](mailto:TSG-CMC@skf.com).